




Almindelig brug

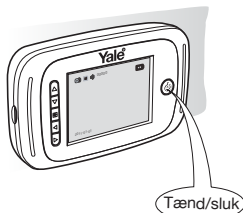


Skærmen

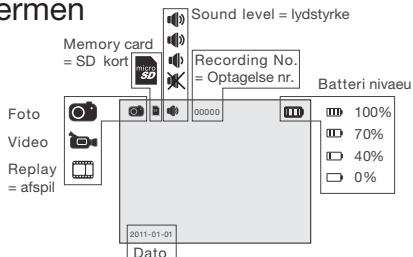


Tag foto

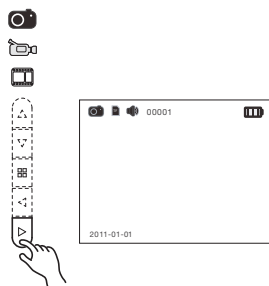


Start / stop videooptagelse

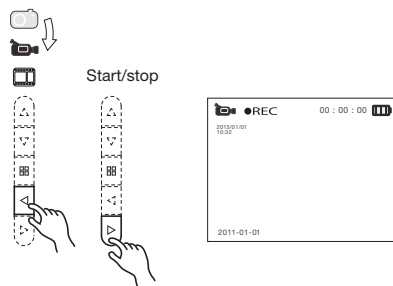


Se fotos

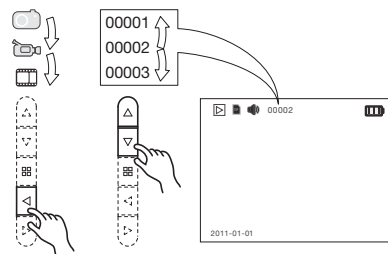


Afspil video

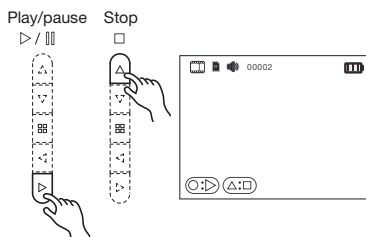


Slet foto / video

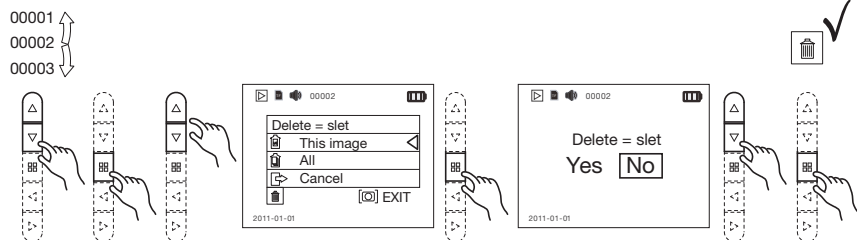

Basis opsætning

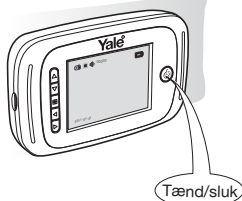

Skærmen

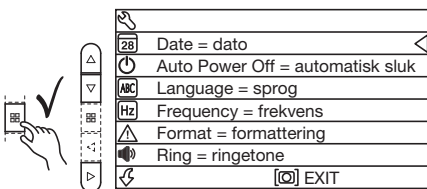

△	Date = dato	
▽	On = tænd	◀
	Off = sluk	
▶	28 Set Date = indstil dato	
	[EXIT] EXIT	
△	Auto Power Off = automatisk sluk	
▽	1 10s = 10 sekunder	
	2 20s = 20 sekunder	◀
	3 30s = 30 sekunder	
▶	Ⓢ Off = ikke automatisk sluk	
	[EXIT] EXIT	
△	Language = sprog	
▽	ABC English	◀
	ABC Deutsch	
	ABC Espanol	
	ABC Francais	
	ABC Italiano	
	ABC Russian	
▶	[EXIT] EXIT	
△	Frequency = frekvens	
▽	50Hz	◀
	60Hz	
▶	[EXIT] EXIT	
△	Format = formattering	
▽	OK	
	Cancel = annullér	◀
▶	[EXIT] EXIT	
△	Ring = ringtone	
▽	Ring Set = valg af ringtone	
	High = høj	◀
	Low = lav	
	Off = ingen ringtone	
▶	[EXIT] EXIT	
△	Camera = kamera	
▽	On = tændt	◀
	Off = slukket	
▶	[EXIT] EXIT	
△	Default Setting = standard indstilling	
▽	OK	◀
	Cancel = annullér	
▶	[EXIT] EXIT	